

# SelectBlinds®

## How To Install

Use a steel tape measure to insure accuracy. Take a moment to plan your installation: consider positioning of under-treatments, clearance for decorative rings, clips & finials etc.; and anything that might be unique to your installation. Follow any specific instructions that came with your hardware.


### 1 1/4" Metal Decorative Rod Installation

#### **Draperies**

- If you do not already have your drapery rods installed, make sure to install them at exactly the same height that you measured the length of your drapes from.
- Follow the instructions below on how to install your drapery rods
- Place your draperies on the rod and arrange them the way that you would like them to hang


#### **Step 1. Tools Required**

Tape measure, drill, drill bits (3/32" for wall studs, 1/4" for wall anchors), screw driver, pencil, step stool or ladder, spirit level, hammer (to tap in anchor, if necessary).

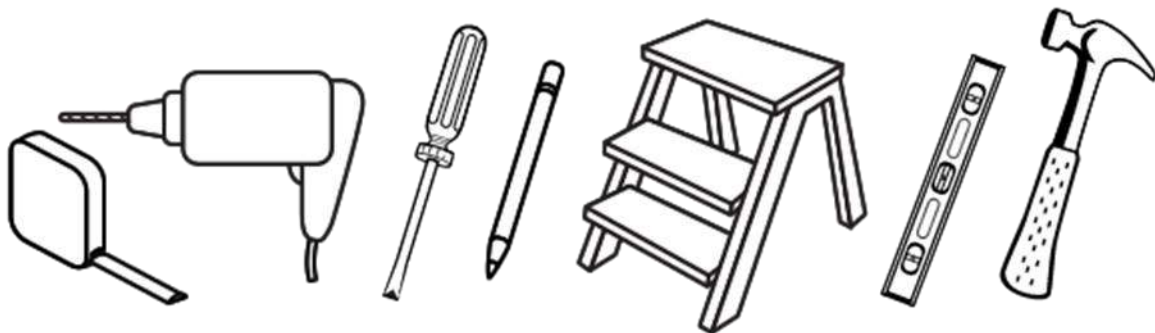


#### **Step 2. Installation**


1. Carefully measure the curtain length, and then position the mounting brackets as desired. Center Supports must be used for larger rod sets, and should be positioned evenly between the outer brackets (see drawings).

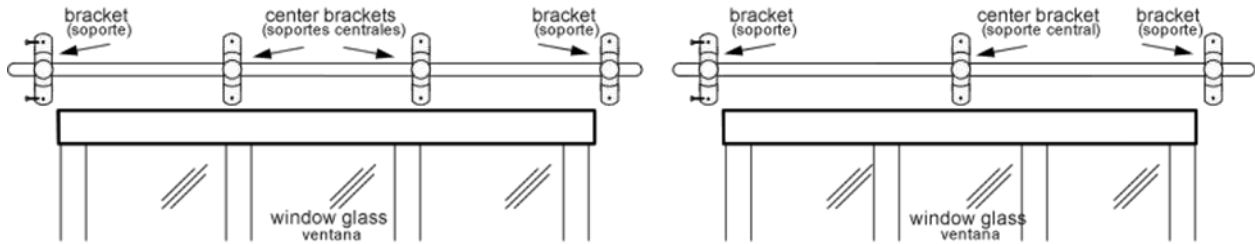

2. Mark screw locations using a pencil. It is recommended that the screws be driven directly into a wall stud. However, if this is not possible or practical, drywall anchors have been provided. Drill starter holes for the screws or screws & anchors.

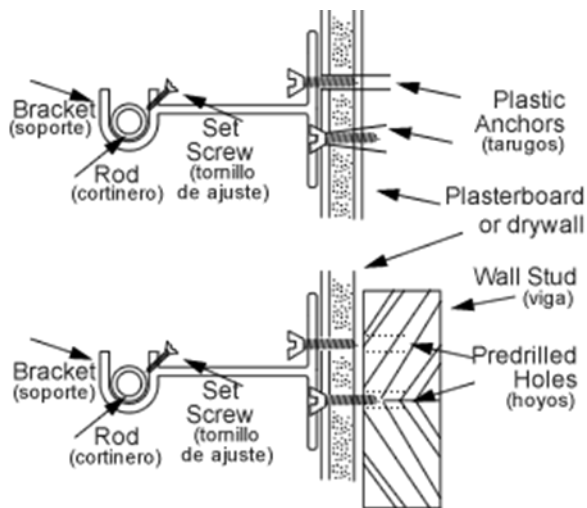

3. Attach the brackets.
4. Slide the drapery panel(s) onto the rod, or slide decorative rings (sold separately) onto the rod, and then place the rod in the brackets. Adjust the width as necessary, and then tighten the set screws.

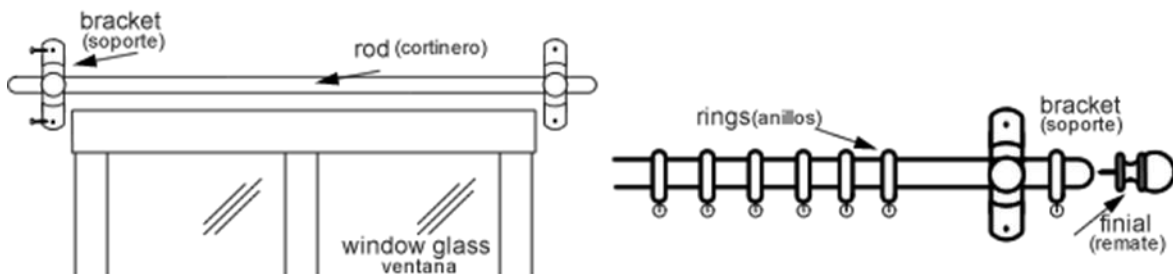

5. Attach decorative finials or end caps.