

INSTALLATION INSTRUCTIONS


HONEYCOMB SHADES

Bottom-Up Lift&Lock Two-Fabric-Combo Lift & Lock

Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shades.

TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners
7. 3/32" Drill Bit & 1/4" Hex Nut Driver Bit

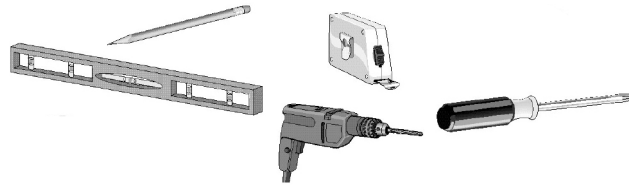




Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not provided) 
Metal	Sheet Metal Screws (Not provided) 
Wood	No. 6 Hex Head Screws (Provided) 


TABLE OF CONTENTS

Getting Started	Page 2
Mounting Type	Page 2
Bracket Installation	Page 2
Inside Mount	Page 3
Outside Mount	Page 3
Side Mount	Page 3
Installing and Removing the Shade	Page 4
Operating the Shade	Page 4
Adjusting the Shade	Page 4
Child Safety	Page 4


GETTING STARTED

All of the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below.


NOTE: Some parts may vary depending upon your chosen mounting options.

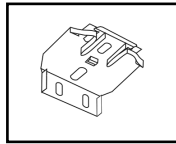


Installation Brackets

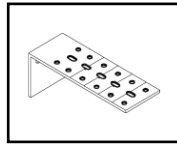

Extension Bracket
(optional)

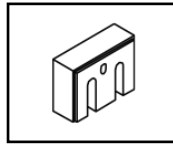


Spacer Blocks
(optional)

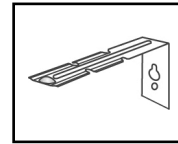

Side Mount Bracket
(optional)

Mounting Types

If the installation brackets are mounted correctly, the rest of the installation process will follow easily. To prepare for this important first step, review the mounting types and basic window terminology illustrated below.

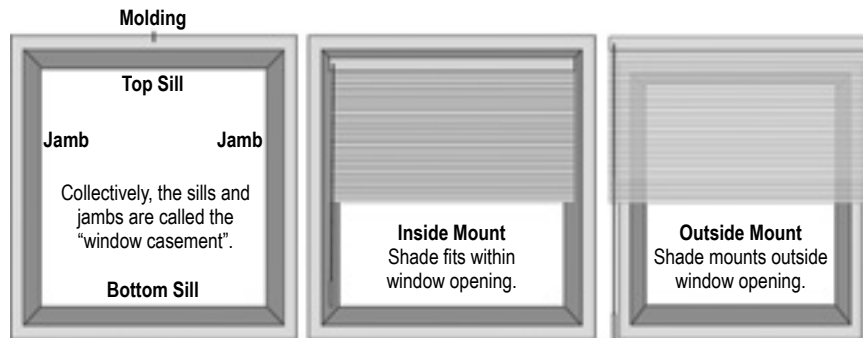


Bracket Installation

Installation brackets may be used for **INSIDE** or **OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade. Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart.

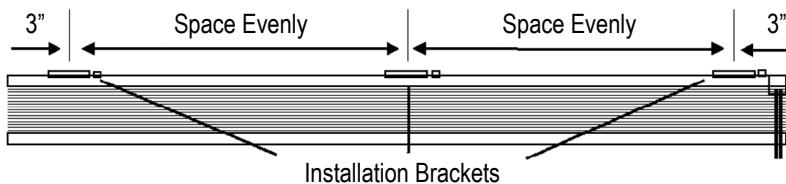

Installation Bracket Requirement Chart	
Shade Width	Brackets Required
12" to 31"	2
31-1/8" to 72"	3
72-1/8" to 84"	4


Inside Mount

For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket.

Refer to the depth requirements chart:

NOTE: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

Minimum Depth	Fully Recessed
1"	2-1/2"

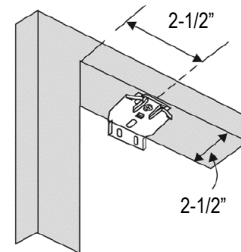

ATTACH THE BRACKETS

1. Screw the bracket through top two holes to desired window sill location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

Outside Mount

For outside mounts the installation brackets will be screwed in place through the two back holes of each bracket.


Refer to the minimum surface height chart.

ATTACH THE BRACKETS

1. Screw the bracket through back two holes to desired location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

Minimum Height
3/4"

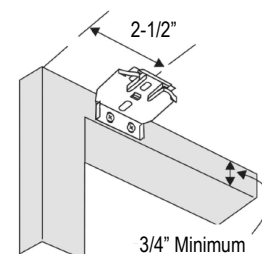

SPACER BLOCKS (optional)


1. Spacer blocks will be attached to the end of each bracket.
2. Ensure the screws are long enough to secure brackets to surface.
3. Do not use more than three spacer blocks per bracket.
4. If installing extension brackets, do not use spacer blocks.

EXTENSION BRACKETS (optional)

1. Position the extension brackets to the desired wall location.
2. The bracket tops must be aligned and level to one another.
3. Mount the extension brackets through the back holes with two screws.
4. Attach the installation brackets to the extension brackets.

Installation brackets attached to extension brackets with the included screws and nuts.

Use the same holes for all brackets to ensure even projection from the surface.

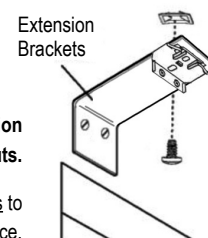


Side Mount

1. Align the bracket top with the desired height of the top of the head rail. Mark holes for screws, remove brackets and drill holes.
2. Insert screws for keyhole slots only. Approximately 1/8" of the screw should be left protruding.
3. Pull the end cap out of the headrail and slide the bracket on as shown. Replace the end cap and then slide the bracket all the way into the headrail.


Install the second bracket in the same manner as the first bracket.

Hook one bracket onto the screw in the window frame, using the keyhole slot. Bring the other end bracket over the screw at the other side of the frame. Slide down, flexing bracket inward until the screw engages in the keyhole slot.


Make sure both brackets are slipped down all the way in the keyhole slot so that the screw is in the top portion of the keyhole slot. Install a screw in the bottom hole of each bracket. Tighten all screws.

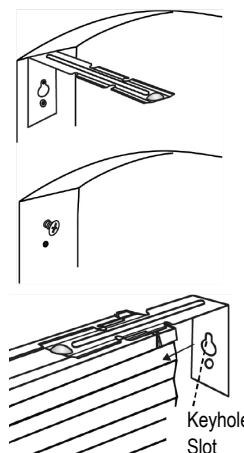

Installing and Removing the Shade

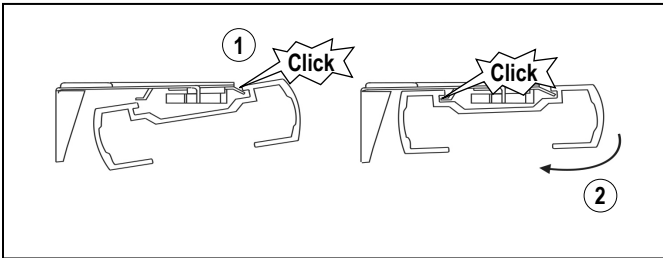

Installing the Shade

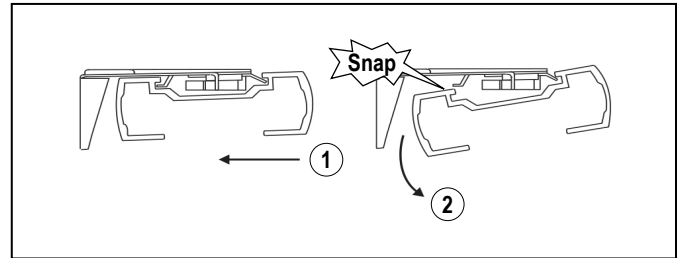


Removing the Shade

Operating the Shade

TO RAISE AND LOWER THE CORDLESS LIFT & LOCK SHADE

1. Push and hold the **button** on the bottomrail handle.
2. Raise or lower the shade to the desired position.
3. Release the button to lock the shade into place.


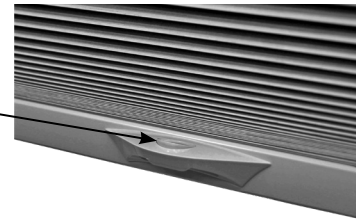


Adjusting the Shade


1. Raise and lower the shade several times.
2. If the length is incorrect or the bottom rail is not level, use the following steps to correct.

HEADRAIL SHADE ADJUSTMENT

1. Remove the headrail.
2. Lift headrail on the side to be adjusted.
3. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the shade.
 - Turn screw counter clockwise to lower that side of the shade.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

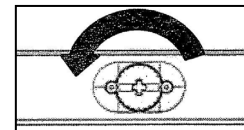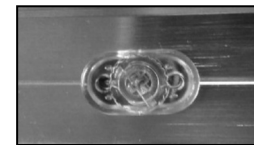

Lower Shade Side

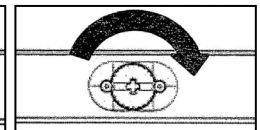

Lift Shade Side

CHILD SAFETY

⚠ WARNING

STRANGULATION HAZARD –
Young children can be strangled by cords.

Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible. Rev 7/21 Print 7/21

⚠ MISE EN GARDE



RISQUE D'ÉTRANGLEMENT –
Les enfants en bas âge

peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.

NOTE: The No Tools Mounting System will come with the shade installation brackets already attached. No drilling is necessary to install this shade. A Flat head screwdriver is needed to remove the No Tools Mounting System.

1. Install the No Tools Mounting System




Make sure mounting surface is level

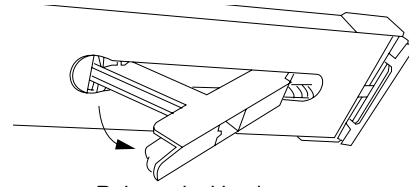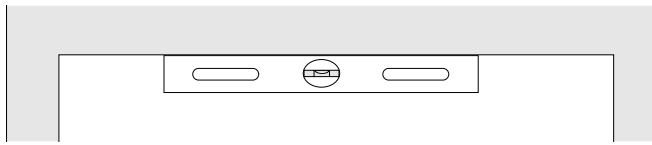

Release locking lever


1a. Install the No Tools Mounting System - Placement and Width Adjustment

IMPORTANT: If mounting on a smooth surface such as painted aluminum or tile you must apply the double sided adhesive (included) to the end caps to keep the mounting system secure. Remove release liner from one side of the adhesive and apply to both end caps and press firmly to adhere.

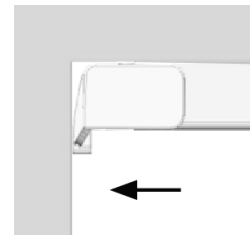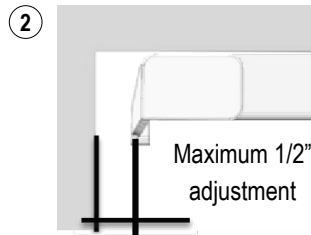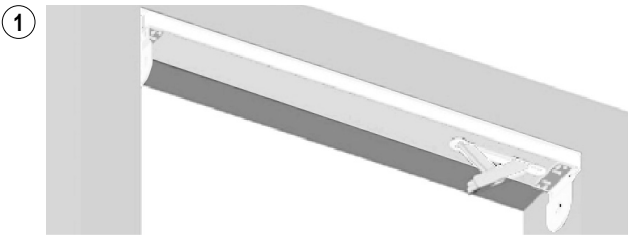

(1) Place the No Tools Mounting System in the window opening so that the end with the lever is up tight against the window casing. (2) If there is a gap at the non-lever end of the rail, simply slide the end cap until it touches the window casing. See END CAP ADJUSTMENT on page 2 if you accidentally pull the end cap out too far. If mounting on a smooth surface, remove the release liners from the double sided adhesive on the endcaps. Replace mounting system.

1b. Install the No Tools Mounting System - Lock in Place

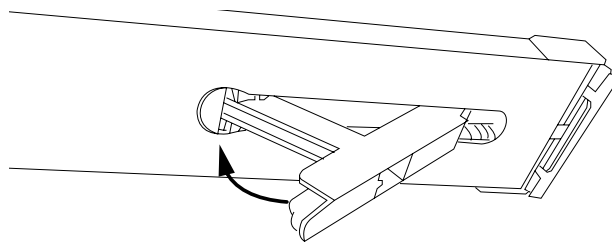

Make sure that the mounting system is level. Press up on the lever to lock the mounting system in place.


2. Install the Shade

Follow the instruction in the installation booklet that came with your shade to install the shade into the mounting brackets on the No Tools Mounting System.

3. Remove the No Tools Mounting System


IMPORTANT: First, remove the shade from the No Tools mounting system following the instructions in the installation booklet that came with your shade. Hold the mounting system securely with one hand. Use a flat head screwdriver to pry open the locking lever.

CAUTION: Lever will release abruptly. Keep hand clear of lever.

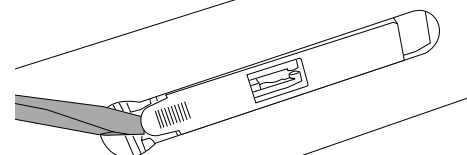

INSTALLATION INSTRUCTIONS

1. Adjusting Moveable End Cap

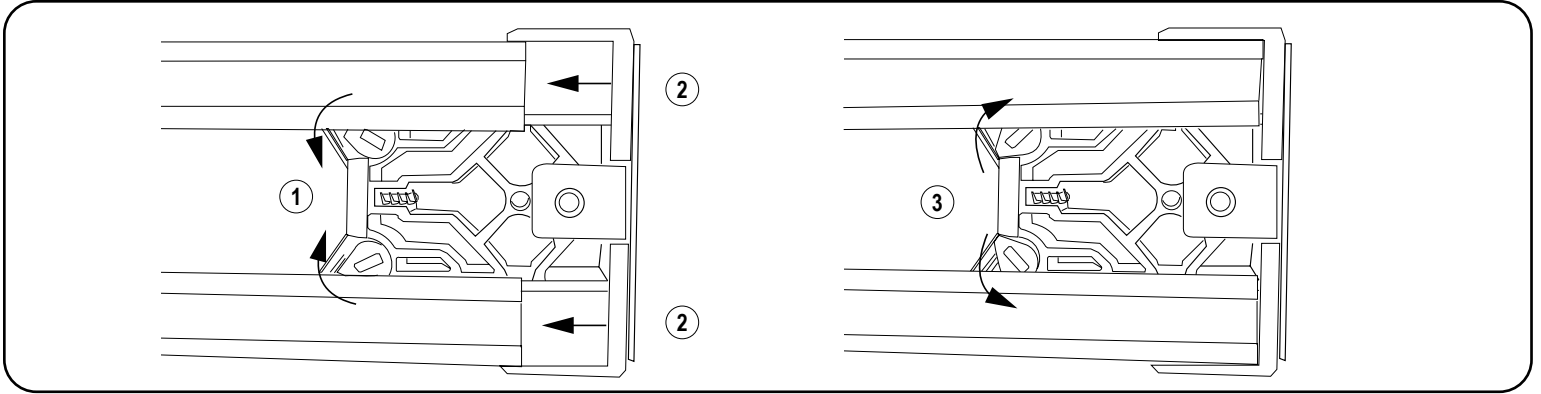

The moveable end cap is designed to only pull out with out tools. If for some reason the end cap needs to be compressed you will need a small flat head screw driver. (1) Use the screw driver to turn the locking tab release screws as shown. (2) Push the End Cap in. (3) Return the locking tabs to their original position.

Child Safety

⚠ WARNING/ADVERTENCIA	
5.1.3	Rev. 5/18 Print 5/18
	<p>Window Blind Cord Can STRANGLE Your Child. To prevent strangulation, purchase cordless products or products with inaccessible cords.</p> <p>La cuerda de la persiana puede ESTRANGULAR a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.</p>